

FLIP-FLOP INSTRUCTIONS



SAFETY WARNINGS

1. CLEAN BOARD BEFORE AND AFTER EACH USE. HOSE OFF TO REMOVE LOOSE DEBRIS. FOR SANITARY REASONS WE RECOMMEND THAT YOU WASH WITH AN ANTI-BACTERIAL SOAP THEN TOWEL DRY.
2. KEEP OUT OF REACH OF SMALL CHILDREN !! THIS IS NOT A TOY AND SHOULD BE USED ONLY FOR THE INTENDED PURPOSE !!
3. WHEN LOADING AND UNLOADING FISH ONTO THE FLIP-FLOP, BE CAREFUL NOT TO GET ANY FINGERS INTO THE CLAMP. THE CLAMP IS VERY POWERFUL AND THE TEETH ARE VERY SHARP.
4. FILLET KNIVES ARE VERY SHARP !! TAKE CARE NOT TO GET HANDS IN THE PATH OF THE KNIFE. A PROPERLY SHARPENED KNIFE WILL CUT DOWN TO THE BONE WITH VERY LITTLE EFFORT. WE RECOMMEND USING A FISH CLEANING GLOVE DESIGNED TO PROTECT HANDS WHEN CLEANING FISH.

HOW TO USE THE "FLIP-FLOP" BOARD

1. ATTACH BOARD TO YOUR FISH CLEANING TABLE OR FOR PORTABILITY TO A PIECE OF 2X8 WOOD BOARD USING THE SUPPLIED SCREWS. DO NOT OVERTIGHTEN THE SCREWS. IT IS ONLY NECESSARY TO HAND SNUG. ONLY USE A HAND SCREWDRIVER. DO NOT USE A POWER DRILL ! FAILURE TO FOLLOW THESE INSTRUCTIONS WILL RESULT IN WARPING OR BREAKING THE BOARD !!!



2. PUSH DOWN ON CLAMP AND INSERT THE FISH. FILLET ONE SIDE OF THE FISH. THEN FLIP IT OVER.



3. FILLET THE OTHER SIDE OF THE FISH. PUSH DOWN CLAMP AND REMOVE THE FISH FROM BOARD.

**FOR MORE INFORMATION
PLEASE VISIT OUR WEBSITE AT
WWW.ROCKHILLPRODUCTS.COM**

